
LATERAL AND SIDE-BY-SIDE Units


Parts List and instructions



Tools Needed:
5/16 Allen Wrench
19mm Socket with Ratchet
Hammer

Hardware included. (per shelving unit)
Track with bumpers. (# of Pieces dependent on system size)
4 Skates per rack
4 Steel wheels
4 Block wedges
4 Hex bolts
4 Copper bushings
4 Washers
4 Lock nuts

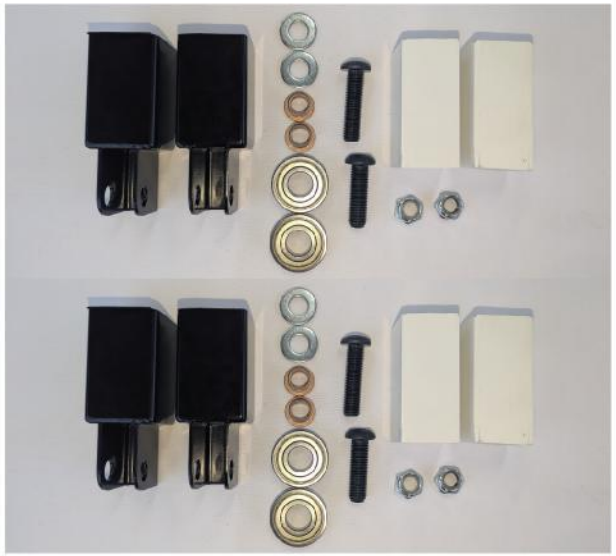

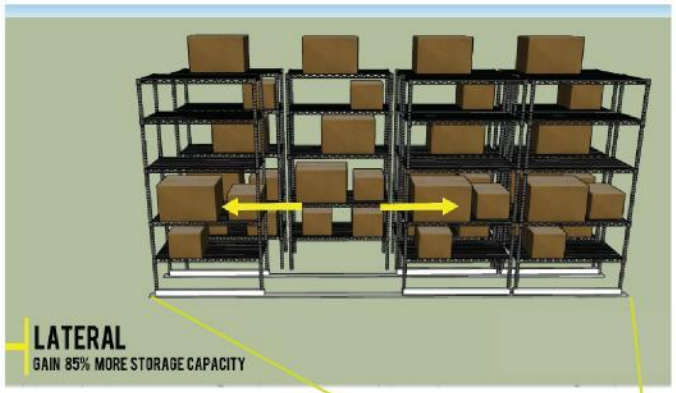



End stops located here.



Black Wheel

Steel Wheel

Lock nut

Washer


Copper Bushing

Hex Bolt

Skate


Track


End-Stop

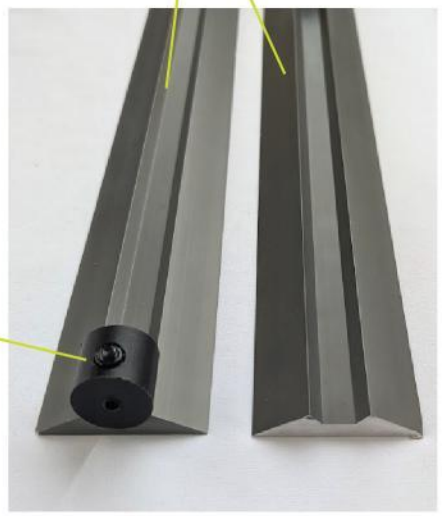



Block Wedges

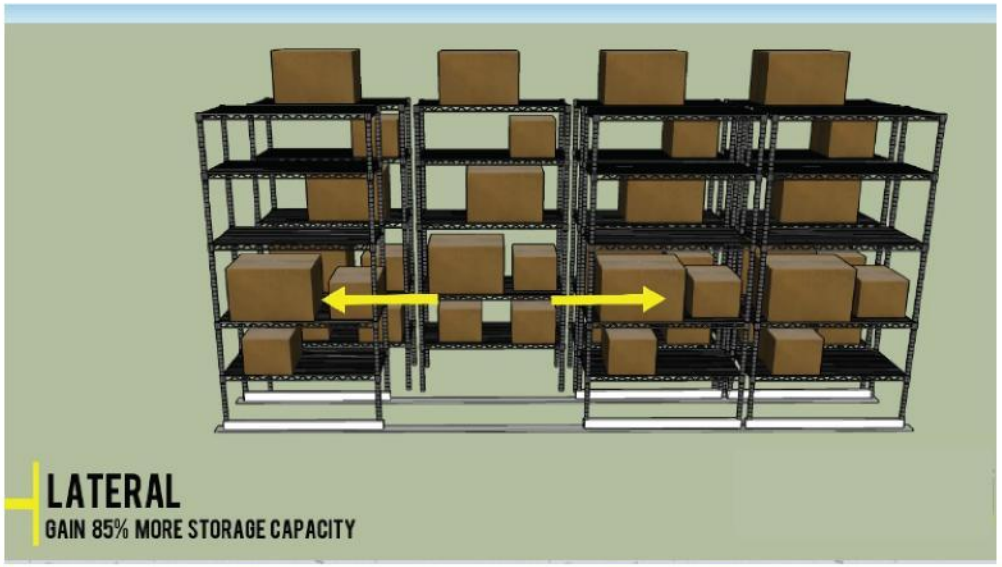

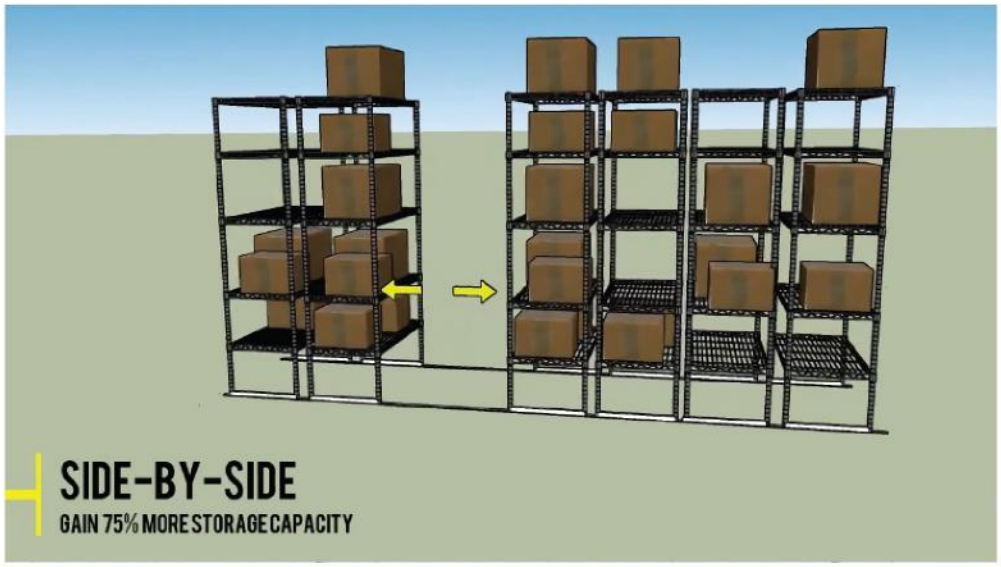

Skate Assembly and mounting.


1. Insert copper bushing into black wheel.


Hold washer on the other side of wheel and slide into skate.


Insert hex bolt through skate and bushing.

2. Thread lock nut onto bolt. Tighten with ratchet and Allen wrench. (do-not over tighten, wheel should have some play))

3. Lock your rivet shelving to skate: Insert white block wedge into skate between the leg and skate. Secure by tapping in with hammer.

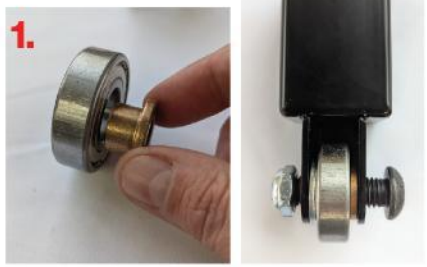

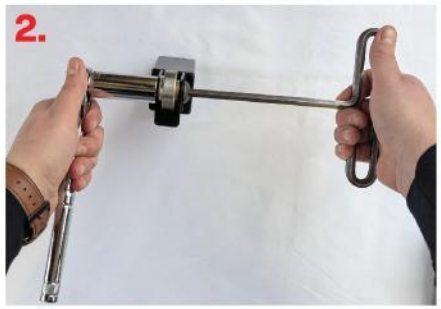

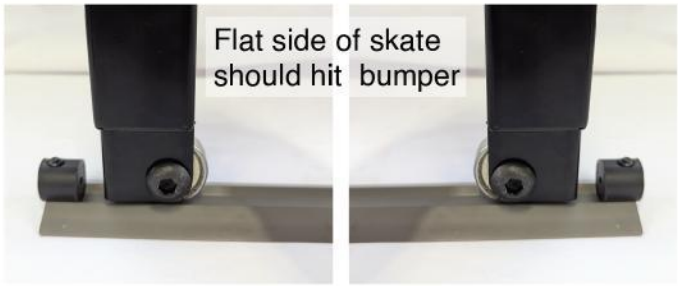



Sliding wedge in at angle helps for fitting.

